



Overview

Block Diagram/Description

The IP-Audio Option provides both audio and control connectivity to an ICM-32 over a standard TCP/IP network. The option consists of an ICM-32 with the IP-Audio Option, and a Barix Annunicom 1000 or 100 unit loaded with SAS IP-Audio Option Firmware and connected to either a RIO or 32KD on the other end. Both units can be networked via LAN, across a dedicated WAN, or even the public Internet.

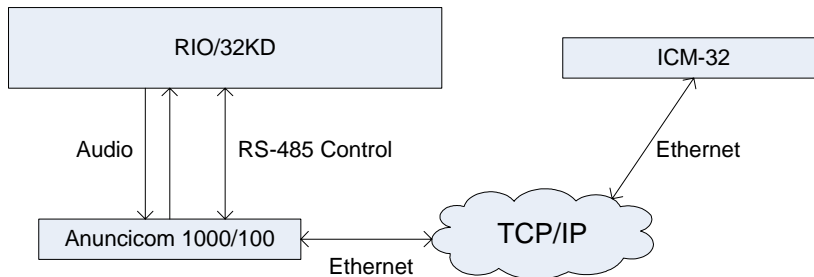


figure 1 - Block Diagram of ICM-32 connectivity with IP Audio Option.

To connect the Annunicom to a 32KD or RIO, you will need to have the following SAS I/O resources available:

- Mono analog input channel
- Mono analog output channel
- Dedicated RS-485 control port on RIO or DRC, with one Annunicom per port.

Network Configuration on a LAN or WAN

Information that you will need from your network administrator before you begin:

- Static IP Address, netmask, and gateway settings for 32KD/RIO side Annunicom
- Static IP Address, netmask and gateway settings for ICM-32

NOTE: It is possible to use DHCP to obtain IP the network settings automatically, however you will have to ensure that your network administrator has configured your DHCP server to always grant the same IP address for the ICM-32 and Annunicom.

Sierra Automated Systems & Engineering Corp.

1.818.840.6749 voice 2821 Burton Avenue radio@sasaudio.com
 1.818.840.6751 fax Burbank California www.sasaudio.com
 91504-3224 USA



ICM-32 Network Setup

Connect the ICM32 to the LAN using rear Ethernet connector J7.

ICM-32 Basic Setup

- On the ICM-32, press and hold the ‘Dialup’ knob for 5 seconds to go to the setup screens.
- Moving the knob to the left or right will navigate through the various setup screens.
- Pressing the setup button again exits setup and applies the settings.
- On the Initial ‘Setup’ screen, set the Stereo Mode to “Mono”.
- The initial ‘Setup’ screen also displays hardware and firmware version information for support and upgrade purposes.
- The setup parameters are stored locally by the intercom station and are retained on power-down/power-up.



figure 2 – Initial setup screen

ICM-32 Network Settings

- Use the dialup knob to select the Network Settings screen.
- Set the “Control” option to “TCP/IP”
- Set “TCP/IP Settings” option to Manual
- NOTE: You can set TCP/IP Settings to “Automatic/DHCP” only if your network administrator has configured a static DHCP assignment for you.
- A summary of the IP Address, netmask, and gateway settings are displayed. If you have configured the ICM-32 to use DHCP, these will show the DHCP-obtained settings.
- The network settings are applied when you exit setup, and can take anywhere from 10 to 20 seconds to take effect.



figure 3 – Network Settings screen

ICM-32 IP Address, Netmask, and Gateway Settings

- Use the dialup knob to select the IP Address, netmask, and gateway screens
- Enter the IP Address, Netmask, and Gateway settings for the ICM-32 using the talk/listen buttons below each field.

Sierra Automated Systems & Engineering Corp.

1.818.840.6749 voice 2821 Burton Avenue radio@sasaudio.com
 1.818.840.6751 fax Burbank California www.sasaudio.com
 91504-3224 USA



figure 4 – IP Address setting screen.

ICM-32 Network Audio Settings

- Use the dialup knob to select the Network Audio screen.
- In the “Destination IP” field, enter the IP Address of the Barix Annunicom unit connected to the RIO/32KD.
- Enter the UDP port number to use for sending audio to the Barix Annunicom, and the UDP port number to use for receiving audio. Note that these settings have to match the corresponding settings on the Annunicom unit. The default value is 3030.
- Press the dialup knob to exit setup and apply the settings.



figure 5 – Network Audio setup screen.

Annunicom 1000/100 Network Setup

Connect the Annunicom to your LAN, and the Annunicom audio in/out and RS-485 to the 32KD or RIO. Refer to the Barix Annunicom documentation and 32KD connector block documentation for wiring of audio and RS-485 connections.

Determine Annunicom IP Address

- Connect the Annunicom to the LAN.
- The Annunicom is configured from the factory to use DHCP and will automatically obtain an IP address on power-up.
- To find out the Annunicom’s IP address, monitor the audio output of the Annunicom when it is powered on. It will announce its DHCP-obtained IP address on the audio outputs on power-up.

Annunicom Network Settings

- Open a web browser on a computer that is also on the LAN, and type in the Annunicom’s IP address in the address bar to get to the Annunicom web configuration page.

Sierra Automated Systems & Engineering Corp.

1.818.840.6749 voice 2821 Burton Avenue radio@sasaudio.com
 1.818.840.6751 fax Burbank California www.sasaudio.com
 91504-3224 USA



- On the ‘SAS Device Setup’ page that is displayed, enter the IP Address, netmask, and gateway that your network administrator has given you for the Annunicom, and hit the ‘Apply’ button.
- The IP address change should take effect after a few seconds.
- To change back to DHCP, follow steps above, and set IP address to 0.0.0.0

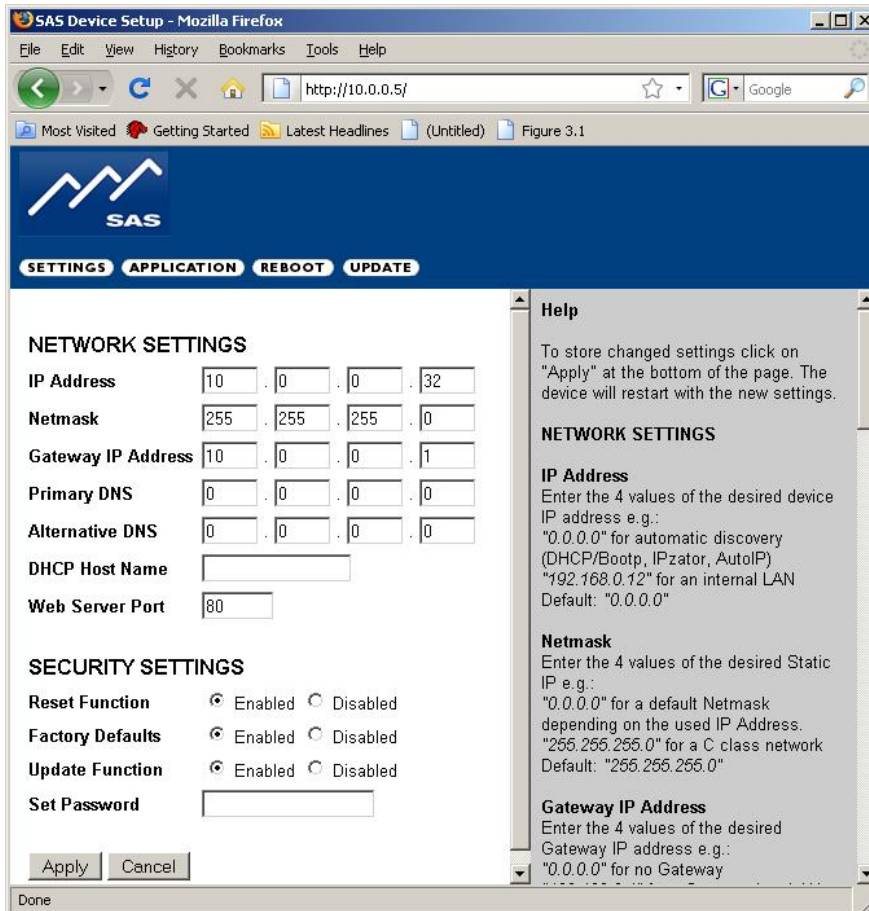


figure 6 - Changing ICM32 IP address to static 10.0.0.32

Annunicom Network Audio

- Open a web browser on a computer that is also on the LAN, and type in the Annunicom’s IP address in the address bar.
- Click on the “Application” link in the upper blue bar.
- Under “Destination IP”, enter the ICM-32’s IP address.
- Make sure the destination and receive port settings match the corresponding settings on the ICM-32.

Sierra Automated Systems & Engineering Corp.

1.818.840.6749 voice 2821 Burton Avenue radio@sasaudio.com
 1.818.840.6751 fax Burbank California www.sasaudio.com
 91504-3224 USA



- On the Annunicom, make sure the “A/D Amplifier Input Gain” is set to “-3dB”, and the “Output Volume” is set to “100%”.
- Hit the “Apply” button, and the changes will take effect in a few seconds.

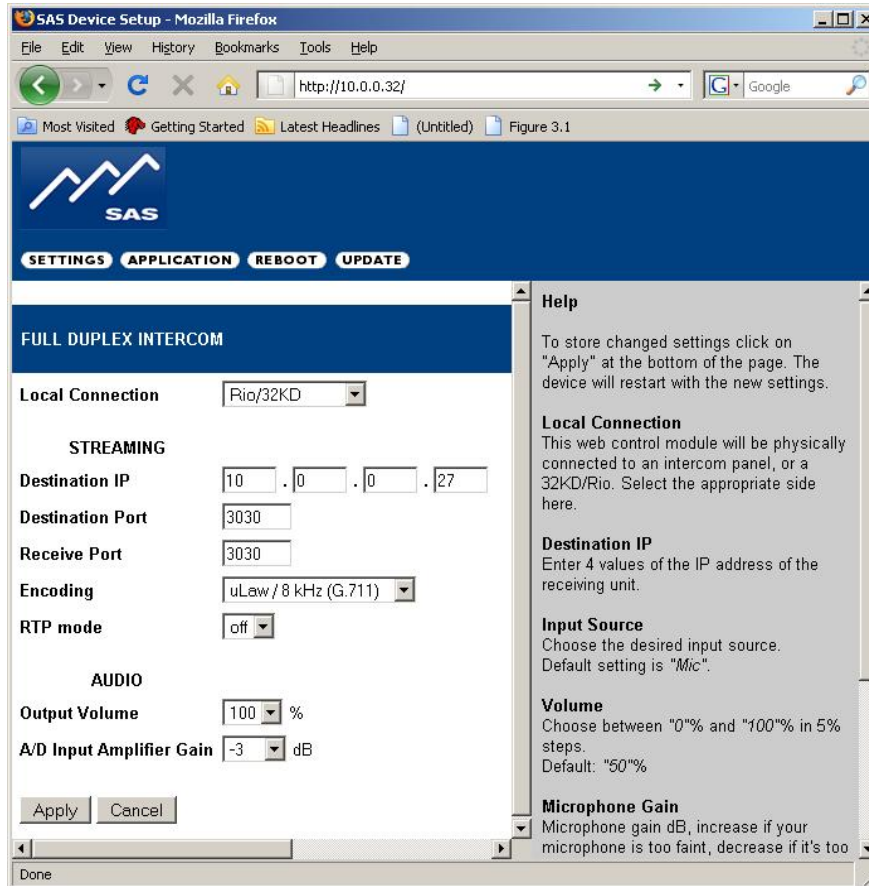


figure 7 - Annunicom Network Audio settings

32KD/RIO Configuration

32KD Port Configuration

- Run the Windows RCS application
- Select the Switcher/Status Configuration folder, click the ‘Configure’ button and go to the Control Module Config tab.
 - For a RIO/KRL, click on the ‘Config’ button of the KRL
 - For a DRC, click on the ‘Config’ button of the DRC
 - For a standalone RIO, click on the ‘Configure’ button

Sierra Automated Systems & Engineering Corp.

1.818.840.6749 voice 2821 Burton Avenue radio@sasaudio.com
 1.818.840.6751 fax Burbank California www.sasaudio.com
 91504-3224 USA



- Under ‘Edit Port’, click on the Port number that corresponds to the RS-485 port connected to the ICM-32 to bring up the Module Configuration dialog.
 - Set the ‘Port State’ to ‘Active’
 - Set the ‘Port Type’ to ‘Enhanced Intercom Panel’
 - Set the ‘Speaker’ and ‘Mic’ to be the system input and output audio channels that are connected to the Annunicom

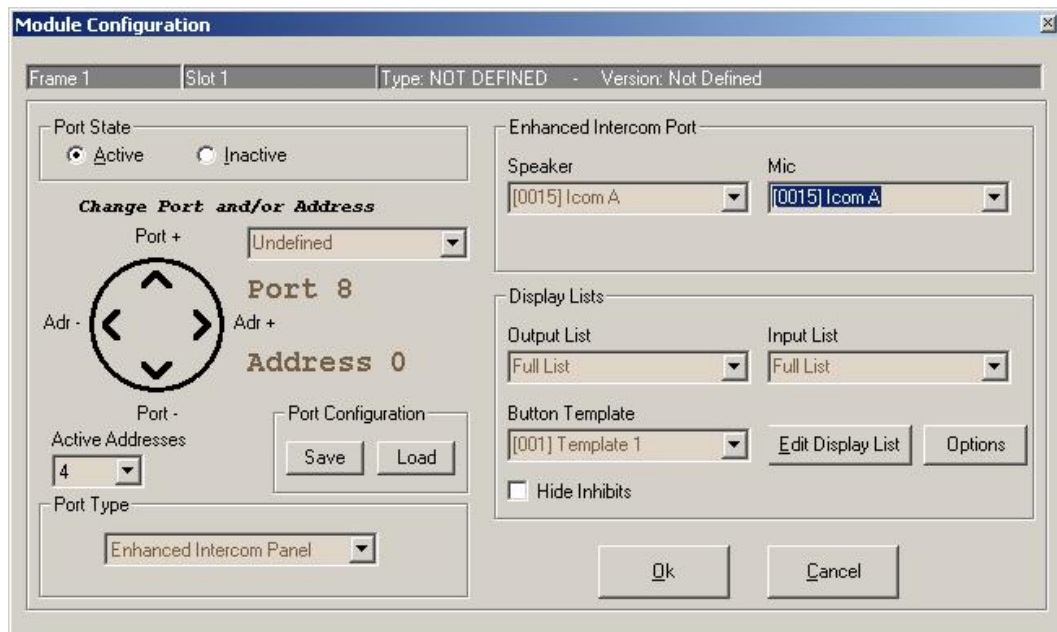


figure 8 – Module Configuration Dialog

- Click on the ‘Options’ button.
- On the “Intercom Muting Options” dialog, enter a value of 3 for the “Comm Time”, and hit “OK”. The “Comm Time” setting sets the polling rate of the panel to be slower than a port that is connected directly via RS-485.

Sierra Automated Systems & Engineering Corp.

1.818.840.6749 voice 2821 Burton Avenue radio@sasaudio.com
 1.818.840.6751 fax Burbank California www.sasaudio.com
 91504-3224 USA



figure 9 – Options dialog with Comm Time delay

- Click ‘Send’ on the Module Configuration dialog for the intercom setup to take effect.
- Click ‘Close’ on the Module Configuration dialog to exit.
- Refer to the “ICM-32 Setup – Getting Started” document for details on how to use the RCS configuration software for general ICM-32 setup and configuration.

32KD Audio Levels

Set Output Gain for Annuncicom

- Run the Windows RCS Application
- Select the “Crosspoint Maps” folder, and find the Intercom’s output channel in the output list. This would be the 32KD output channel that is connected to the input of the Annuncicom.
- Right click on the output channel, and select “DSP Output Gain”.
- Set the DSP output gain to –17dB

Sierra Automated Systems & Engineering Corp.

1.818.840.6749 voice 2821 Burton Avenue radio@sasaudio.com
 1.818.840.6751 fax Burbank California www.sasaudio.com
 91504-3224 USA

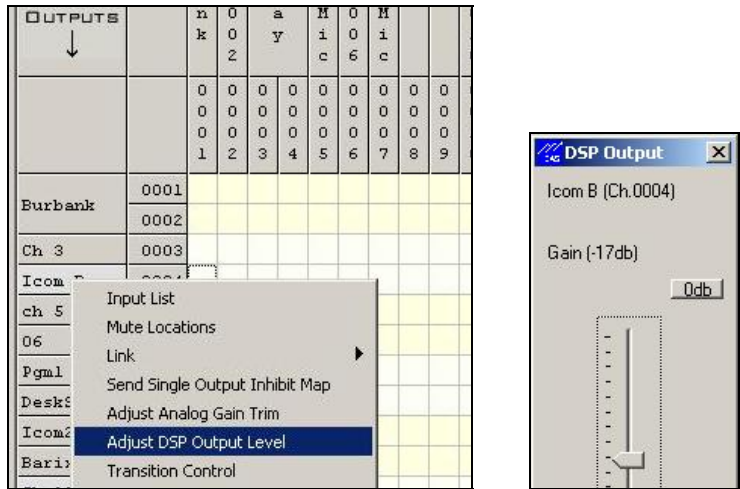


figure 10 – DSP Output Level Adjustment

Set Input Gain for Annunicom

- Run the Windows RCS Application
- Select the “Crosspoint Maps” folder, and find the Intercom’s input channel in the output list. This would be the 32KD input channel that is connected to the output of the Annunicom.
- Right click on the output channel, and select “Adjust Trim Gain”.
- Set the Input Trim Gain to +14dB

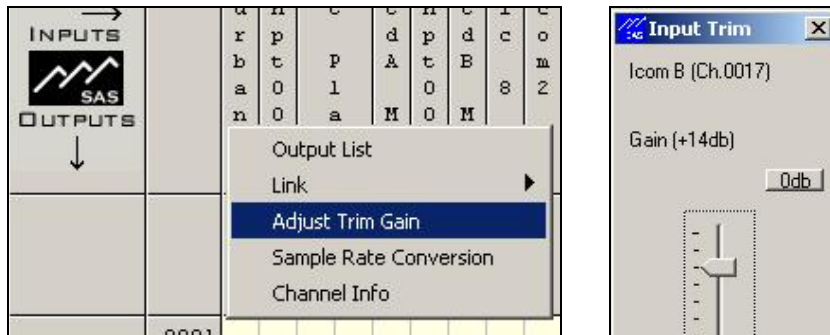


figure 11 – Input Trim Gain

Appendix A - Network Audio Options

- To configure the IP Audio Options on the ICM32 or Annunicom, open a web browser window and enter the IP address of the ICM32 or Annunicom.
- Click on the “Application” button in the upper blue banner.



- The IP Audio Option supports several different codecs. The default codec is G.711 uLaw 8KHz, but you can select different higher-quality audio formats if you have sufficient network bandwidth.
- The “RTP Mode” setting adds RTP header information to the network audio packets. The recommended setting is “Off”.
- NOTE: Both the ICM-32 and Annunicom have to have the same codec settings, and same setting for RTP mode.
- A few codec settings and their associated bitrates are given in figure 8 below. Note that the actual network bitrates will be slightly higher based on packet overhead.

Codec	Samplerate	Mode	Bitrate
G.711 (aLaw or uLaw)	8kHz	Mono	64 Kbps
G.711 (aLaw or uLaw)	24kHz	Mono	192 Kbps

Figure 8. Codec settings

- NOTE: The codec selection page also includes audio gain adjustment levels. Make sure that the audio settings are as follows:
 - Annunicom:
 - “A/D Amplifier Input Gain” is set to “-3dB”
 - “Output Volume” is set to “100%”
 - ICM-32:
 - “A/D Amplifier Input Gain” is set to “0dB”
 - “Output Volume” is set to “100%”

Appendix B - Port Forwarding

- If the ICM-32 or Annunicom is behind a firewall with network address translation (NAT), you will need to configure the other side to use the public IP address of the firewall as the “Destination IP address” under the Network Audio settings.
- You will also need to configure your firewall to forward UDP port 3030 and UDP port 10861 to the ICM32 or Annunicom’s LAN address.
- You can find out your public IP address from a computer that is on the same LAN as the end that is behind the firewall. From a web browser, go to www.whatismyip.com. It will display your public IP address.

Sierra Automated Systems & Engineering Corp.

1.818.840.6749 voice 2821 Burton Avenue radio@sasaudio.com
 1.818.840.6751 fax Burbank California www.sasaudio.com
 91504-3224 USA

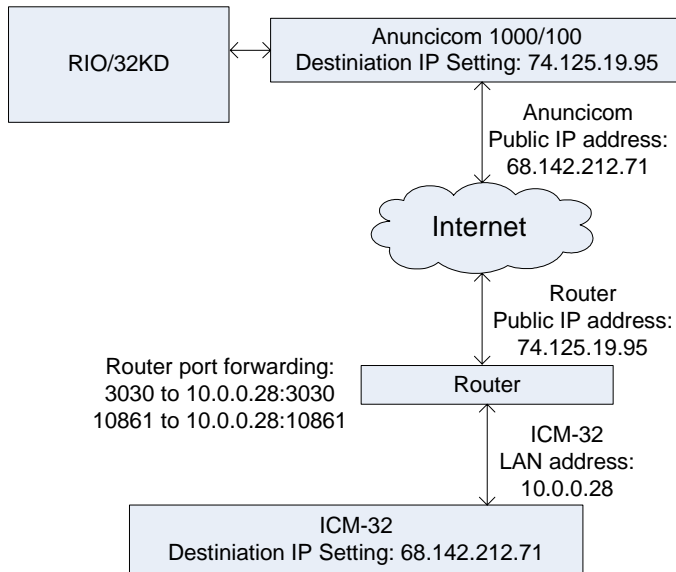


figure 9 – Example of port forwarding & setup for ICM-32 behind a firewall.

Appendix C – How to Reset the Annunicom IP address if it is set to a static IP on a different Subnet

- If the Annunicom has a fixed IP address that doesn't match your subnet (ex: it announces a fixed IP address in the 192.168.0.X range, and your network uses 10.0.0.X addresses), you can still connect to its web interface from a PC to change it.
- On the PC, go to start->run, type "cmd", and in the command prompt window type the following:

```
route add <Annunicom IP addr> mask 255.255.255.255 <your PC's IP addr>
```

- You can then enter the Annunicom's IP address in your web browser and get to the configuration page, and enter a correct IP address, gateway and subnet mask.

Sierra Automated Systems & Engineering Corp.

1.818.840.6749 voice 2821 Burton Avenue radio@sasaudio.com
 1.818.840.6751 fax Burbank California www.sasaudio.com
 91504-3224 USA