ICM32 REAR PANEL J14 J3 MIC DATA I/O EXPANSION PANEL **ETHERNET** MAIN I/O **POWER** LOGIC INTERFACE AUXILIARY I/O HEADPHONE CONFIG ACT LINK 0 0 J1 **J4** J7 Function: +12VDC/3.0A Power input Function: MICROPHONE Function: ETHERNET Connector Type: 3-pin/5mm centers Connector Type: 3-pin XLR (Female) Connector Type: RJ-45 RIA CONNECT# 31330103 PIN 1 - TX+ PIN 1: MIC GROUND 1● ● ● PTN 2 - TX-PIN 2: MIC IN+ PIN 3 - RX+ PIN 3: MIC IN-Mating Connector: RIA CONNECT# ASP0450399-3CS PIN 4 - NO CONNECT PIN 5 - NO CONNECT PTN 2: +1.2VDC Mating Connector: 3-pin XLR (Male) PIN 6 - RX-PINS 1 & 3: GROUND PIN 7 - NO CONNECT PIN 8 - NO CONNECT J5 J2 Function: HEADPHONE Mating Connector: RJ-45 Function: LOGIC INTERFACE Connector Type: 1/4" TIP-RING-SLEEVE LINK ACT Connector Type: DB25 (Female) 0 \circ TIP: HEADPHONE LEFT LED COLOR | FUNCTION LED COLOR | FUNCTION PING: HEADPHONE RIGHT SLEEVE: HEADPHONE GROUND NO ACTIVITY NO LINK HALF-DUPLEX GREEN GREEN 10 Mbit LINK Mating Connector: DB25 (Male) RED FULL-DUPLEX RED 100 Mbit LINK PIN 2: RELAY 1-PIN 8: OPTO 1-J6 PIN 3: RELAY 1+ PIN 9: OPTO 1+ J8 & J14 Function: AUXILIARY I/O PIN 4: RELAY 2-PIN 10: OPTO 2-Connector Type: DB25 (Male) Function: EXPANSION PANEL (J8) & DATA I/O (J14) PIN 5: RELAY 2+ PTN 11: OPTO 2+ Connector Type: RJ-45 PIN 6: RELAY 3-PIN 12: OPTO 3-PIN 7: RELAY 3+ PIN 13: OPTO 3+ PIN 1 - RS485+ • • • • • • • • • • • PIN 2 - RS485-PIN 14: RS232 TX PIN 3 - GROUND Mating Connector: DB25 (Female) PIN 15: RS232 RX PIN 4 - +12VDC \neg Removable from J8 or J14. PIN 1: RS232 GROUND PIN 1: LINE IN LEFT+ PIN 14: LINE IN RIGHT+ PIN 5 - +12VDC - Factory default: Connected PIN 2: LINE IN LEFT-PIN 15: LINE IN RIGHT-PIN 6 - GROUND PINS 21, 23, 25: +12VDC PIN 3: SHIELD PIN 16: SHIELD PIN 7 - AUX RS485+ \neg Removable from J14 only. PINS 16, 17, 18, 19, 20, 22, & 24: GROUND PIN 8 - AUX RS485- - Factory default: Connected PIN 4: LINE OUT LEFT+ PIN 17: LINE OUT RIGHT+ Mating Connector: RJ-45 PIN 5: LINE OUT LEFT-PIN 18: LINE OUT RIGHT-PIN 19: SHIELD PIN 6: SHIELD Д3 DS1 Function: MAIN I/O PIN 20: HEADPHONE LEFT Function: CONFIGURATION Connector Type: RJ-45 PIN 21: HEADPHONE RIGHT SW1 SW2 - Address: SW5 SW6 SW7 - NOT USED (Set to OFF) PIN 1 - AUD_IN_1+ PIN 22: HEADPHONE GROUND PIN 2 - AUD IN 1-OFF OFF --> A0 ON OFF --> A1 PIN 3 - AUD OUT+ PIN 11: RS485+ OFF ON --> A2 SW8 PIN 4 - RS485-PIN 12: RS485-ON ON --> A3 OFF --> Does NOT apply 48V phantom PIN 5 - RS485+ PIN 13: RS485 GROUND power to Rear Panel Mic PIN 6 - AUD OUT-ON --> Applies 48V phantom power PIN 7 - AUD IN 2+ PIN 24: +12VDC to Rear Panel Mic OFF --> Normal mode PINS 9 & 25: GROUND PIN 8 - AUD_IN_2-ON --> Factory diagnostics mode Mating Connector: RJ-45 Sierra Automated Systems & Engineering Corp. PINS 7, 8, 10, & 23: NO CONNECT SW4 - FUTURE USE (Set to OFF) ICM32 Rear Panel Connectors (Rev B)