


APC88

8-pin Panduit Header

DB9

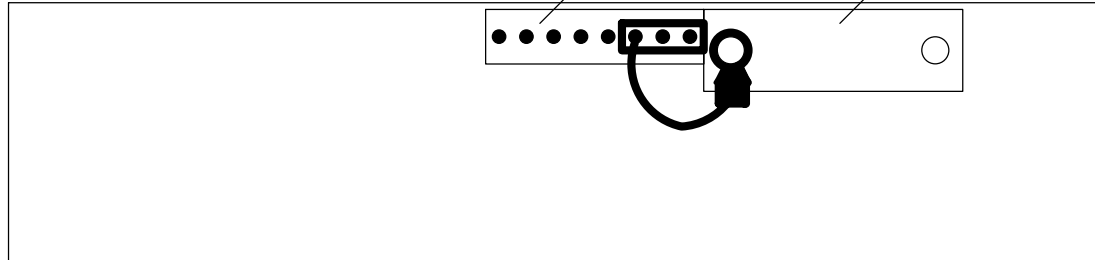

Instructions:

- 1) Remove DB9 jackscrew closest to 8-pin Panduit header.
- 2) Remove and discard washer.
- 3) Slip Grounding jumper lug into jackscrew. Use jackscrew supplied in kit. Make sure lug body is angled up toward jackscrew head.
- 4) Screw jackscrew (with lug) down tight, making sure the spacer between the DB9 and PCB is in place. The lug body should now be angled away from PCB components.
- 5) Place 3-pin Panduit female connector onto 8-pin Panduit header as shown in figure. This connects Panduit header pin 3 (signal GND) to Jackscrew (chassis GND).

Sierra Automated Systems & Engineering Corp.
2625 San Fernando Blvd.
Burbank, California 91504

Title
APC88 Grounding Instructions

Size B Document Number Rev A

Date: Wednesday, March 07, 2007 Sheet 1 of 1